

## SOFRIDIER GAS RAM REPLACEMENT

### INSTRUCTIONS

#### Remove Seat

- 1- Unscrew M8 Grub Screws at top of Softrider pedestal (13).
- 2- Push Outer tube down (5).
- 3- Unscrew Top ( round black disc) of Gas ram top anti clockwise, remove old gas ram,
- 4- Take new gas ram and screw back clockwise into Softrider base (9), making sure that the screw thread in base of new gas ram is screwing into base correctly.
- 5- Once screwed in turn new gas ram to align holes with Softrider Pedestals top holes (13)
- 6- Pull Outer tube up and align holes, screw in M8 Grub Screws (13) screw in till flush with Softrider aluminium shaft (5)

